

How to Enable Power Saving Functionality in Wi-Fi driver

If you would like to enable/disable Power Saving Function in Wi-Fi driver, you can follow as below setting before compiling Wi-Fi driver.

Enable Power Saving Function:

Set `CONFIG_POWER_SAVING` to `y` in Makefile

e.g. **`CONFIG_POWER_SAVING = y`**

Disable Function:

Set `CONFIG_POWER_SAVING = n` in Makefile

e.g. **`CONFIG_POWER_SAVING = n`**